

## Spare Part List

Marine


FCF Classic Series - 115V (60Hz) | 230V (50/60Hz)

5,000 – 9,000 BTU

R410



**FCF 5K & 9K Spare Parts Diagram**

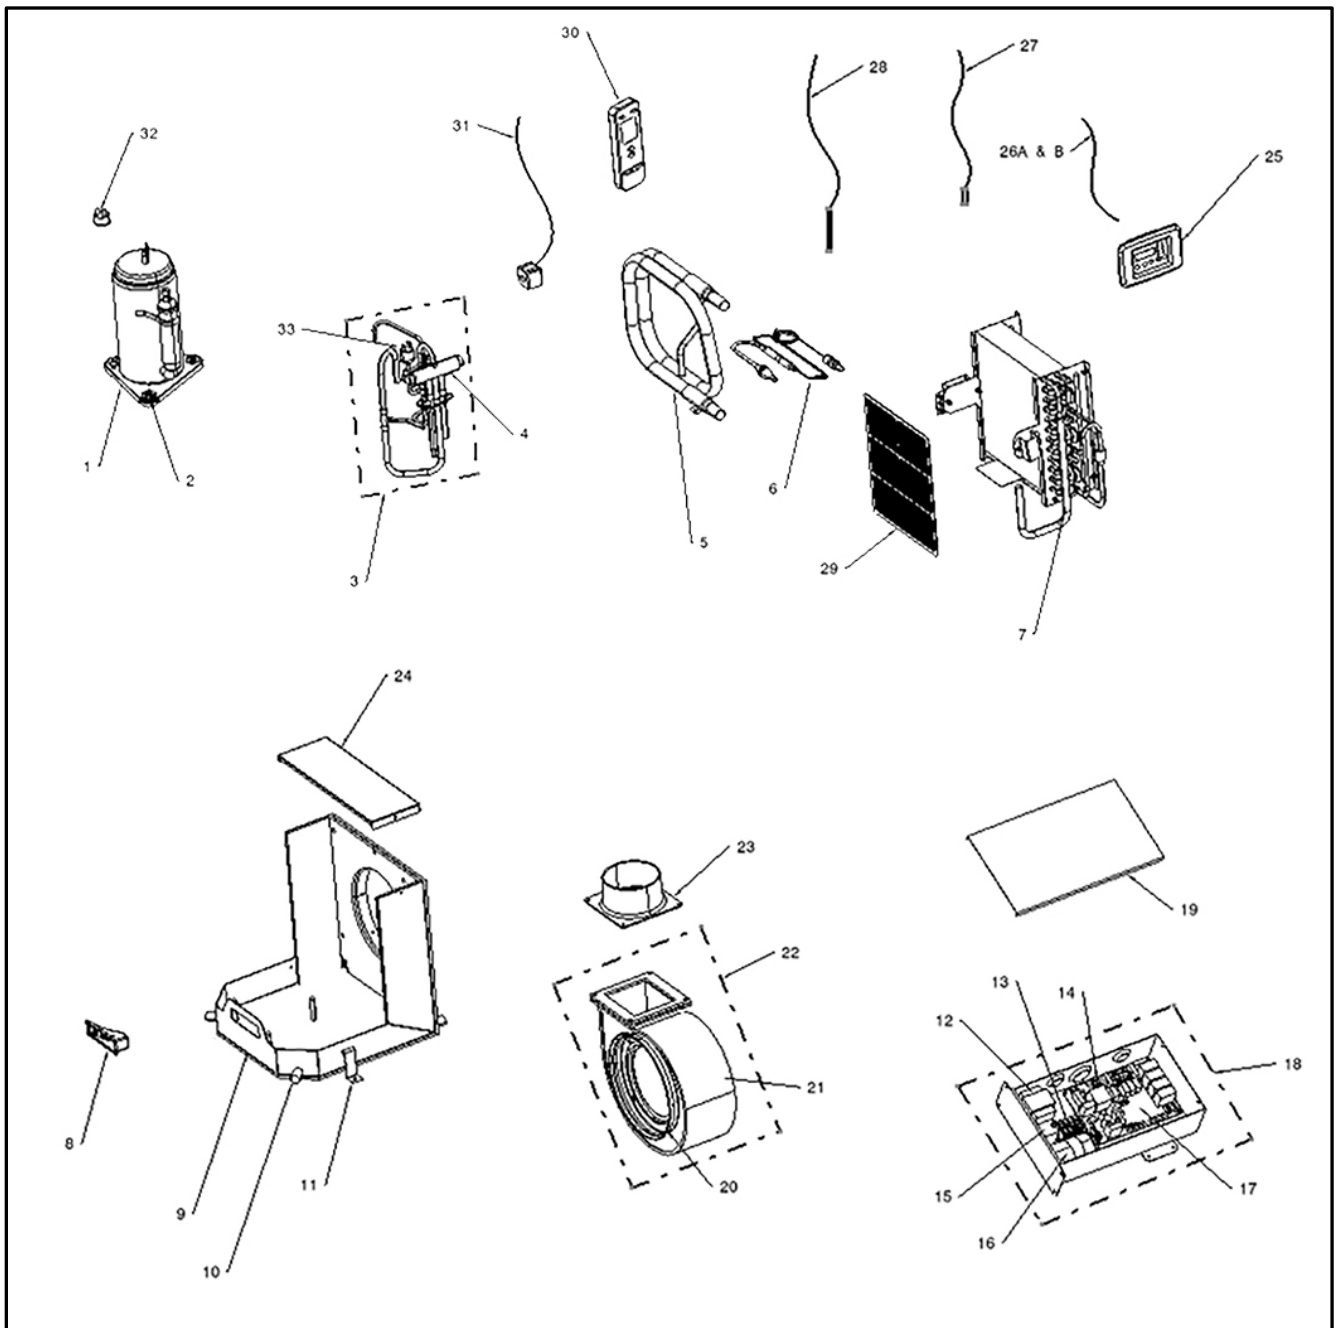

Position	FCF 5k & 9k Spare Parts		R410A 115V (60 Hz)		R410A 230V (50/60 Hz)	
	Webasto Part #	Description	FCF0005000GS 5k 115V	FCF0009000GS 9k 115V	FCF0005023G 5k 230V	FCF0009023G 9k 230V
1	5012022A	Compressor FCF 5k 115V R410A	X			
	5012025A	Compressor FCF 9k 115V R410A		X		
	5012039A	Compressor FCF 5k 230V R410A			X	
	5012302A	Compressor FCF 9k 230V R410A				X
2	5012311A	Mounting Gasket Compressor FCF 5k & 9k 115V	X	X		
	5012300A	Mounting Gasket Compressor FCF 5k & 9k 230V			X	X
3	5012023A	Reverse Valve Assembly FCF 5k R410A	X		X	
	5012026A	Reverse Valve Assembly FCF 9k 115V R410A		X		
	5012068A	Reverse Valve Assembly FCF 9k 230V R410A				X
4	5012053A	Reverse Valve FCF 5k & 9k	X	X	X	X
5	5012021A	Condenser Coil FCF 5k R410A	X		X	
	5012041A	Condenser Coil FCF 9k R410A		X		X
6	5012020A	Capillary Assembly FCF 5k R410A	X		X	
	5012027A	Capillary Assembly FCF 9k 115V R410A		X		
	5012047A	Capillary Assembly FCF 9k 230V R410A				X
7	5012024A	Evaporator Assembly FCF 5k R410A	X		X	
	5012028A	Evaporator Assembly FCF 9k R410A		X		X
8	5012186A	Handle Small for Base Frame FCF 5k	X		X	
	5012189A	Handle Big for Base Frame FCF 9k		X		X
9	5012042A	Base Frame Assembly FCF 5k 115V	X			
	5012048A	Base Frame Assembly FCF 9k 115V		X		
	5012040A	Base Frame Assembly FCF 5k 230V			X	
	5012052A	Base Frame Assembly FCF 9k 230V				X
10	5012329	Condensate Drain Pipe FCF	X	X	X	X
11	FCFSP0058A	Clamp Hold Down FCF	X	X	X	X
12	5012173A	Transformer FCF 115V	X	X		
	5012192A	Transformer FCF 230V			X	X
13	FCFSP0059A	Terminal Board FCF 5k & 9k	X	X	X	X
14	FCFSP0089A	Fuse 3.15 Amp 250V Glass FCF	X	X	X	X
15	FCFSP0006A	Capacitor 15uF-300V Blower Start FCF	X	X		
	FCFSP0063A	Capacitor 3.5uF-450V Blower Start FCF			X	
	FCFSP0067A	Capacitor 4uF-500V Blower Start FCF				X
16	FCFSP0072A	Capacitor 40uF-450V Compressor FCF	X			
	FCFSP0018A	Capacitor 50uF-450V Compressor FCF		X		
	FCFSP0062A	Capacitor 15uF-450V Compressor FCF			X	
	FCFSP0069A	Capacitor 25uF-450V Compressor FCF				X
17	FCFSP0064A	Circuit Board FCF 5k & 9k 115V	X	X		
	FCFSP0071A	Circuit Board FCF 5k & 9k 230V			X	X

18	5012166A	Electrical Box Assembly FCF 5k 115V	X			
	5012169A	Electrical Box Assembly FCF 9k 115V		X		
	5012168A	Electrical Box Assembly FCF 5k 230V			X	
	5012171A	Electrical Box Assembly FCF 9k 230V				X
19	FCFSP0004A	Electrical Box Cover FCF 5k & 9k	X	X	X	X
20	5012318A	Diversion Ring FCF 5k & 9k	X	X	X	X
21	5012314A	Blower FCF 5k 115V	X			
	5012317A	Blower FCF 9k 115V		X		
	5012321A	Blower FCF 5k 230V			X	
	5012319A	Blower FCF 9k 230V				X
22	5012176A	Blower Assembly FCF 5k 115V	X			
	5012181A	Blower Assembly FCF 9k 115V		X		
	5012177A	Blower Assembly FCF 5k 230V			X	
	5012178A	Blower Assembly FCF 9k 230V				X
23	FCFSP0011A	Duct Ring 4" FCF	X	X	X	X
24	5012325A	Evaporator Cover FCF 5k	X		X	
	5012326A	Evaporator Cover FCF 9k		X		X
25	FCFSP0010A	Digital Display FCF	X	X	X	X
26A	FCFSP0098A	Display Cable 8m Long FCF	X	X	X	X
26B	FCFSP0076A	Display Cable 15m Long FCF	X	X	X	X
27	FCFSP0003A	Evaporator Temp Sensor FCF	X	X	X	X
28	FCFSP0002A	Ambient Temp Sensor FCF	X	X	X	X
29	FCFSP0016A	Air Filter FCF 5k	X		X	
	5012191A	Air Filter FCF 9k		X		X
30	FCFSP0013A	Remote FCF 5k & 9k				
31	FCFSP0001A	Solenoid Reversing Valve FCF 115V	X	X		
	FCFSP0060A	Solenoid Reversing Valve FCF 230V			X	X
32	5012037A	Overload Protection FCF 5k 115V	X			
	5012059A	Overload Protection FCF 9k 115V		X		
	5012058A	Overload Protection FCF 5k 230V			X	
	5012060A	Overload Protection FCF 9k 230V				X
33	5012055A	High Pressure Switch FCF R410A	X	X	X	X