

## **Spare Part List**

Marine

FCF Platinum Series - 230V (50/60Hz)

20,000 & 25,000 BTU

R410





Position	FCF Platinum 20k & 25k Spare Parts		R410A 230V (50/60 Hz)	
	Webasto Part #	Description	5011402A 20k 230V	5011403A 25k 230V
1	5012054A	Compressor FCF Platinum 20k 230V R410A	X	
	5012062A	Compressor FCF Platinum 25k 230V R410A		X
2	5012174A	Mounting Gasket Compressor FCF Platinum 20k 230V	X	
	5012187A	Mounting Gasket Compressor FCF Platinum 25k 230V		X
3	5012167A	Reverse Valve Assembly FCF Platinum 20k R410A	X	
	5012063A	Reverse Valve Assembly FCF Platinum 25k R410A		X
4	5012055A	High Pressure Switch FCF Platinum R410A	X	X
5	5012056A	Low Pressure Switch FCF Platinum R410A	X	X
6	5012595A	Reverse Valve FCF Platinum 20k & 25k	X	X
7	5012061A	Condenser Coil FCF Platinum 20k R410A	X	
	5012064A	Condenser Coil FCF Platinum 25k R410A		X
8	5012057A	Capillary Assembly FCF Platinum 20k R410A	X	
	5012065A	Capillary Assembly FCF Platinum 25 R410A		X
9	5012066A	Evaporator Assembly FCF Platinum 20k & 25k R410A	X	X
10	5012189A	Handle Big for Base Frame FCF Platinum 20 & 25k	X	X
11	5012329A	Condensate Drain Pipe FCF Platinum	X	X
12	FCFSP0058A	Clamp Hold Down FCF Platinum	X	X
13	5012312A	Base Frame Assembly FCF Platinum 20k	X	
	5012313A	Base Frame Assembly FCF Platinum 25k		X
14	5012190A	5 Amp 250V Fuse FCF Platinum	X	X
15	5012192A	Transformer FCF Platinum 230V	X	X
16	5012452A	Capacitor 35uF-450V Compressor FCF Platinum	X	
	5012454A	Capacitor 45uF-450V Compressor FCF Platinum		X
17	FCFSP0063A	Capacitor 3.5uF-450V Blower Start FCF Platinum	X	X
18	FCFSP0059A	Terminal Board FCF Platinum	X	X
19	5012310A	AC Contactor FCF Platinum 230V	X	X
20	5012315A	Capacitor 25uF-450V Blower Run FCF Platinum	X	X
21	5012434A	Main Circuit Board FCF Platinum	X	X
22	5012441A	Electrical Box Assembly FCF Platinum 20k	X	
	5012442A	Electrical Box Assembly FCF Platinum 25k		X
23	5012605A	Electrical Box Cover FCF Platinum 20k & 25k	X	X
24	5012328A	Diversion Ring FCF Platinum 20k & 25k	X	X
25	5012305A	Blower Left Side FCF Platinum 20k & 25k	X	X
26	5012185A	Blower Assembly Left Side FCF Platinum 20k & 25k	X	X
27	5012184A	Blower Assembly Right Side FCF Platinum 20k & 25k	X	X
28	5012320A	Blower Right Side FCF Platinum 20k & 25k	X	X

29	FCFSP0017A	Duct Ring 5" FCF Platinum	X	X
30	5012327A	Evaporator Cover FCF Platinum 20k & 25k	X	X
31	5012186A	Handle Small for Base Frame FCF Platinum 6k	X	X
32	5012299A	Digital Display FCF Platinum #	X	X
33A	FCFSP0098A	Display Cable 8 meters Long FCF Platinum	X	X
33B	FCFSP0076A	Display Cable 15 meters Long FCF Platinum	X	X
34	5012594A	Evaporator Temp Sensor FCF Platinum	X	X
35	FCFSP0081A	Air Filter FCF Platinum 20k & 25k	X	X
36	5012172A	Ambient Temp Sensor FCF Platinum	X	X
37	5012610A	Remote FCF Platinum *Compatible with digital display v-30 or higher. Refer to item 32	X	X
38	FCFSP0060A	Solenoid Reversing Valve FCF Platinum 230V	X	X

# Refer to [FCF Platinum Remote Control Quick-Start Guide](#) for more information