 


# FCF Air Conditioning 2013 Product List

Feel Cool Fast

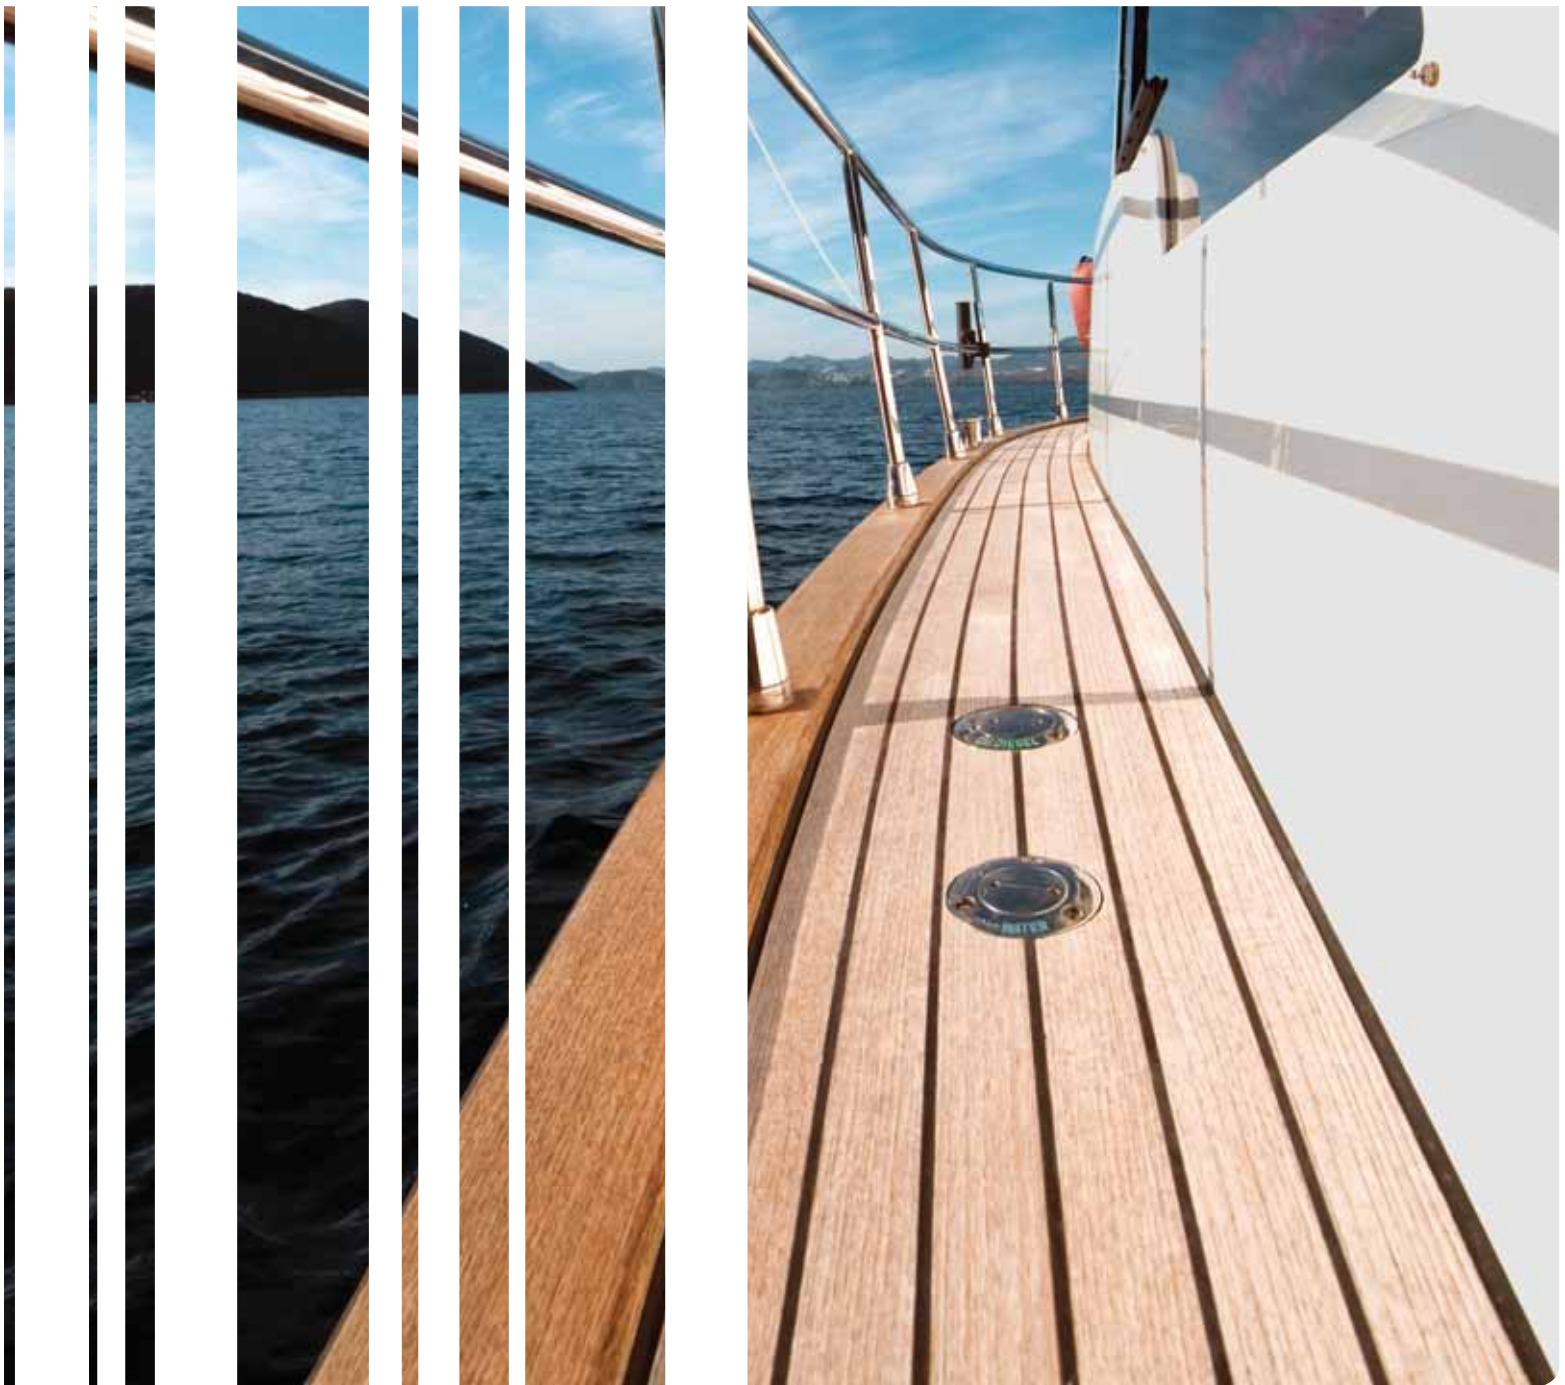

## Table of Contents

Complete FCF System Kits.....	3
Building your FCF System .....	4
FCF Air Conditioners .....	5
Fresh Air Kits.....	6-11
Air Grilles.....	12-14
Air System Accessories .....	15-16
Sea Water Kits .....	17
Pumps and Relays .....	18
Sea Water System Components .....	18
Spare Parts.....	19-21

- All prices and part numbers contained herein are subject to change without notice.
- Prices do not include sales tax, freight or insurance.
- List price quoted in US currency.
- Special Order items require 10 to 12 weeks lead time.
- These prices are effective January 1, 2012. Subject to change without notice.

## Complete FCF System Kits

### What is a Complete FCF System Kit?

The purchase of an FCF air conditioning system can be done as a complete system which provides you with all of the appropriate Sea Water and Ducting parts to get your unit installed immediately. The components of a Complete FCF System Kit are also available in the following pages in the event you need additional components or you purchased an FCF system by itself and need the appropriate additional Sea Water or Ducting components. The list below contains the part numbers of the Complete FCF System Kits currently available.

### FCF Kits

<i>Part Number</i>	<i>Description</i>
FCFK016A	FCF 5,000 115V Kit w/AC, Sea Water, and Ducting
FCFK017A	FCF 5,000 230V Kit w/AC, Sea Water, and Ducting
FCFK018A	FCF 9,000 115V Kit w/AC, Sea Water, and Ducting
FCFK019A	FCF 9,000 230V Kit w/AC, Sea Water, and Ducting
FCFK020A	FCF 12,000 115V Kit w/AC, Sea Water, and Ducting
FCFK021A	FCF 12,000 230V Kit w/AC, Sea Water, and Ducting
FCFK022A	FCF 16,000 115V Kit w/AC, Sea Water, and Ducting
FCFK023A	FCF 16,000 230V Kit w/AC, Sea Water, and Ducting



An example of Complete FCF System Kit contents

## Building your FCF System - Please select the following:

<b>STEP 1</b>	<b>Air Conditioner</b>		
	Core Unit FCF	Please select the core unit according to the required cooling capacity and the available voltage.	Page 5
		<i>Note: electric cable, control box, display cable, installation and operating manuals, air ducting collar, and external temperature sensor are included with core unit kits</i>	
<b>STEP 2</b>	<b>Air System</b>	Please order a fresh air kit or order the air ducting system pieces separately:	
	Fresh Air Kits		Pages 6-10
	Return Air Grille		Pages 13-14
	Air Ducting		Pages 16
	Transition Box		Pages 15-16
	Supply Air Grille		Page 12-14
<b>STEP 3</b>	<b>Sea Water Circuit</b>	Please order a sea water kit or order the sea water circuit pieces separately:	
	Sea Water Kits		Pages 17
	Sea Water Inlet		Page 20
	Sea Water Strainer		Page 20
	Sea Water Pump		Page 18
	Closing Valve		Page 20
	Overboard Discharge		Page 20

## FCF Air Conditioners



**FCF5000**  
5,000 BTU



**FCF9000**  
9,000 BTU



**FCF12000**  
12,000 BTU



**FCF16000**  
16,000 BTU



**FCF24000**  
24,000 BTU

### FCF Air Conditioners - 115 volt

<i>Part Number</i>	<i>Description</i>
FCF005000GS	Feel Cool Fast 5,000 Btu 115V
FCF009000GS	Feel Cool Fast 9,000 Btu 115V
FCF012000GS	Feel Cool Fast 12,000 Btu 115V
FCF016000GS	Feel Cool Fast 16,000 Btu 115V
FCF024000GS	Feel Cool Fast 24,000 Btu 115V

### FCF Air Conditioners - 230 volt

<i>Part Number</i>	<i>Description</i>
FCF005023G	Feel Cool Fast 5,000 Btu 230V 50/60 Hz
FCF009023G	Feel Cool Fast 9,000 Btu 230V 50/60 Hz
FCF012023G	Feel Cool Fast 12,000 Btu 230V 50/60 Hz
FCF016023G	Feel Cool Fast 16,000 Btu 230V 50/60 Hz
FCF024023G	Feel Cool Fast 24,000 Btu 230V 50/60 Hz

## Fresh Air Kits - for 5,000/9,000 - Plastic

1



2



3



4



5



 
6



<i>Part Number</i>	<i>Description</i>
FCF000112A	5,000/9,000 Basic Kit
<b>Kit Contents</b>	
<i>Item Number</i>	<i>Description</i>
1	Grille Return Air Fixed Blades 10" X 10" (Plastic, White)
2	Grille Round w/Damper 4" (Plastic, White)
3	Grille, Supply Air Adjustable Blades, 8" X 4" (Plastic, White)
4	Air Divider Hose "Y"; 4" Entry; 4" & 4" Outlets
5	Transition Box 8"X 4" Back Entry 4" Flat Oval
6	Duct, A/C Flexible Insulated 4"X 25'

## Fresh Air Kits - for 5,000/9,000 - (Teak)

1

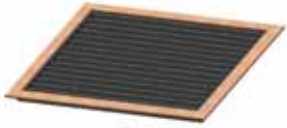

2



3



4




5



<i>Part Number</i>	<i>Description</i>
FCF000113A	5,000/9,000 Teak Kit
<b>Kit Contents</b>	
<i>Item Number</i>	<i>Description</i>
1	Grille, Return Air 11" x 8" (Teak)
2	Grille, 4-Way Supply Air 6" x 6"; (Teak)
3	Air Divider Hose "Y"; 4" Entry; 4" & 4" Outlets
4	Duct A/C Flexible Insulated 4"x 25'
5	Transition Box 6"x 6" Back Entry 4" Round

## Fresh Air Kits - for 12,000/16,000 - (Teak)

 1

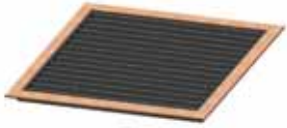

2



3



4



5




<i>Part Number</i>	<i>Description</i>
FCF000114A	12,000/16,000 Teak Kit
<b>Kit Contents</b>	
<i>Item Number</i>	<i>Description</i>
1	Grille, Return Air 14" x 10" (Teak)
2	Grille, 4-Way Supply Air 8" x 4" (Teak)
3	Duct AC Flexible Insulated 5" x 25'
4	Air Divider Hose "Y"; 5" Entry; 5" & 5" Outlets
5	Transition Box 8"x 4" Side Entry 5" Oval



## Fresh Air Kits - for 12,000/16,000 - Plastic

 1

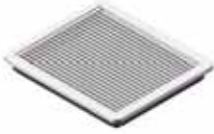

2



3



4



5



<i>Part Number</i>	<i>Description</i>
FCF000115A	12,000/16,000 White ABS Kit
<b>Kit Contents</b>	
<i>Item Number</i>	<i>Description</i>
1	Grille Return Air Fixed Blades; 14" x 10" (Plastic, White)
2	Grille Supply Air Adjustable Blades; 8" x 4" (Plastic, White)
3	Duct AC Flexible Insulated 5" x 25'
4	Air Divider Hose "Y"; 5" Entry; 5" & 5" Outlets
5	Transition Box 8"x 4" Side Entry 5" Oval

## Fresh Air Kits - Add-a-Vent for 5,000/9,000

1



<i>Part Number</i>	<i>Description</i>
FCF000116A	Add-A-Vent Plastic Kit for 5,000/9,000
<b>Kit Contents</b>	
<i>Item Number</i>	<i>Description</i>
1	Grille, Round, with Damper, 4" (Plastic, White)
2	Air Divider Hose "Y", 4" Entry, 4" & 4" Outlets

2



1



<i>Part Number</i>	<i>Description</i>
FCF000117A	Add-A-Vent Teak Kit for 5,000/9,000
<b>Kit Contents</b>	
<i>Item Number</i>	<i>Description</i>
1	Grille, 4-Way Supply Air, 6" x 6", (Teak)
2	Transition Box 6" x 6" Back Entry, 4" Round
3	Air Divider Hose "Y", 4" Entry, 4" & 4" Outlets

2



3



## Fresh Air Kits - Add-a-Vent for 12,000/16,000



<i>Part Number</i>	<i>Description</i>
FCF000118A	Add-A-Vent Plastic Kit for 12,000/16,000
<b>Kit Contents</b>	
<i>Item Number</i>	<i>Description</i>
<b>1</b>	Air Divider Hose "Y", 5" Entry, 5" & 5" Outlets
<b>2</b>	Transition Box 8" x 4" Side Entry, 5" Oval
<b>3</b>	Grille, Supply Air Adjustable Blades, 8" x 4" (Plastic, White)



<i>Part Number</i>	<i>Description</i>
FCF000119A	Add-A-Vent Teak Kit for 12,000/16,000
<b>Kit Contents</b>	
<i>Item Number</i>	<i>Description</i>
<b>1</b>	Grille, 4-Way Supply Air, 8" x 4" (Teak)
<b>2</b>	Air Divider Hose "Y", 5" Entry, 5" & 5" Outlets
<b>3</b>	Transition Box 8" x 4" Side Entry, 5" Oval

## Functioning Principals

### 1 Minimum Air Grille Sections

To obtain acceptable noise levels at maximal blower speed minimum requirements for grille and ducts sections should be observed. The size of the transition box behind the supply air-grille is also important.

FCF Model	Supply Air Grille Model / Section cm <sup>2</sup>	Return Air Grille Model / Section cm <sup>2</sup>	Duct Diameter
5.000 Btu	1 x 10 x 4" 190 cm <sup>2</sup>	1 x 11 x 8" 490 cm <sup>2</sup>	100 mm (4")
9.000 Btu	1 x 12 x 4" 235 cm <sup>2</sup>	1 x 11 x 8" 490 cm <sup>2</sup>	100 mm (4")
12.000 Btu	1 x 10 x 5" 250 cm <sup>2</sup>	1 x 14 x 7" 550 cm <sup>2</sup>	125 mm (5")
16.000 Btu	1 x 12 x 6" 390 cm <sup>2</sup>	1 x 14 x 10" 800 cm <sup>2</sup>	125 mm (5")
or 16.000 Btu	2 x 10 x 4" 380 cm <sup>2</sup>		125 mm (5")

### 2 Blower Outlets

90° turns with flexible ducts directly from blower outlets should be avoided at all costs as they introduce severe restrictions in the air-flow. All FCF blowers can be rotated through 45° steps to obtain a straight-line outlet from the blower. This facility should be used whenever possible.

### 3 Return Grille Offset

It should be avoided to place a return air grille directly opposite the finned coil surface of an air-handler, because this will allow propagation of direct blower-motor noise through the grille. The grille should be offsetted to chicane the return air to the coil inlet. Direct noise propagation will be reduced in a significant manner.

### 4 Duct Type

Webasto recommends insulated ducting for all installations, to reduce condensation. To avoid accidental crushing, flexible air-ducts should be of high quality with sufficiently strong steel spiral reinforcement. Spiral type ducts should be extended to their maximum length for the best interior smoothness.

### 5 Large Vessel Requirements

In general requirements for large vessels are even more stringent than the table above. These special requirements can be obtained from Webasto on request.

In order to customize the wooden air grilles on page 13, please choose from the following wood options:


Example: WBCL004004x    WBCL0040040 = *Teak* Air Grille 12 x 5    WBCL0040042 = *Mahogany* Air Grille 12 x 5

Suffix	Wood Type	Description	Suffix	Wood Type	Description
0	Teak	Asian Teak	7	Maple	American soft Maple
1	Cherry	American Cherry	8	Beech	American Beech
2	Mahogany	Honduran Mahogany	9	Cedar	Spanish Cedar
3	Ash	American white Ash	10	Makore	African Cherry
4	Oak	American white Oak	11	Hickory	American Hickory
5	Walnut	American black Walnut	12	Jatoba	Brazilian Jatoba
6	Poplar	American Poplar			

**Note:** Teak versions in stock. Other wood options may have longer lead times or extra shipping costs.

## Air Grilles

### Supply Air Grilles, 4-Way

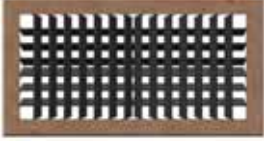


### Wedge Type Supply Air Grille



### Supply Air Grille 2-Way, Closeable


 
### Return Air Grille with Filter

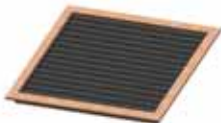

<i>Part Number</i>	<i>Description</i>
WBCL004000x	Grille, 4-Way Supply Air 8" X 4" (Teak)
WBCL004001x	Grille, 4-Way Supply Air 10" X 4" (Teak)
WBCL004002x	Grille, 4-Way Supply Air 12" X 4" (Teak)
WBCL004018x	Grille, 4-Way Supply Air 10" X 5" (Teak)
WBCL004004x	Grille, 4-Way Supply Air 12" X 5" (Teak)
WBCL004024x	Grille, 4-Way Supply Air 12" X 6" (Teak)
5010233A	Grille, 4-Way Supply Air 6" X 6" (Teak)
WBCL004023x	Grille, 4-Way Supply Air Wedge 30° 10" X 5" (Tk)
WBCL004005x	Grille, 2-Way Supply Air Closeable 8" X 4" (Tk)
WBCL004019x	Grille, 2-Way Supply Air Closeable 10" X 4" (Tk)
WBCL004006x	Grille, 2-Way Supply Air W/Damper 12" X 4" (Tk)
WBCL004022x	Grille, 2-Way Supply Air Closeable 10" X 5" (Tk)
WBCL004025x	Grille, 2-Way Supply Air Closeable 12" X 5" (Tk)
WBCL004020x	Grille, Return Air Fixed Insert 12" X 5" (Teak)
WBCL004017x	Grille, Return Air Fixed Insert 11" X 8" (Teak)
WBCL004007x	Grille, Return Air Fixed Insert 14" X 7" (Teak)
WBCL004021x	Grille, Return Air Fixed Insert 12" X 10" (Teak)
WBCL004008x	Grille, Return Air Fixed Insert 14" X 10" (Teak)
WBCL004009x	Grille, Return Air Fixed Insert 14" X 12" (Teak)


## Air Grilles
 
### Supply Air Grille (ABS)



<i>Part Number</i>	<i>Description</i>
WBCL004030	Grille Supply Air Fixed Blades 10" X 4" (Plastic, White)
WBCL004031	Grille Supply Air Fixed Blades 12" X 4" (Plastic, White)
WBCL004033	Grille Supply Air Fixed Blades 10" X 6" (Plastic, White)
WBCL004032	Grille Supply Air Fixed Blades 10" X 5" (Plastic, White)
WBCL500140	Grille Supply Air Adjustable Blades 8" X 4" (Plastic, White)
WBCL004076	Grille Return Air Fixed Blades 10" X 8" (Plastic, White)
WBCL004077	Grille Return Air Fixed Blades 10" X 10" (Plastic, White)
WBCL004078	Grille Return Air Fixed Blades 12" X 12" (Plastic, White)
WBCL004080	Grille Return Air Fixed Blades 14" X 10" (Plastic, White)
WBCL004081	Grille Return Air Fixed Blades 14" X 12" (Plastic, White)
WBCL004090	Grille Round W/Damper 4" (Plastic, Black)
WBCL004091	Grille Round W/Damper 4" (Plastic, Brown)
WBCL004092	Grille Round W/Damper 4" (Plastic, White)

### Return Air Grille (ABS) with Filter

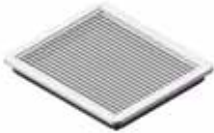

### Round Plastic Grille



## Air System Accessories

### Air Divider Adaptor "T"



### Air Divider Hose "T"



### Air Divider Hose "Y"



### Standard Transition Box



### Round Hose Rings



### Oval Hose Rings



### Air Divider Adaptor "Y"



Part Number	Description
WBCL001549	Air Divider Adapter "T" - 4" Entry 4" & 4" Outlets
5010304	Air Divider Adapter "T" - 5" Entry 4" & 4" Outlets
WBCL001550	Air Divider Adapter "T" - 5" Entry 5" & 4" Outlets
5010305	Air Divider Adapter "T" - 5" Entry 5" & 5" Outlets
5010307	Air Divider Hose "T" - 4" Entry 4" & 4" Outlets
5010306	Air Divider Hose "T" - 5" Entry 4" & 4" Outlets
5010309	Air Divider Hose "Y" - 4" Entry 3" & 3" Outlets
5010303	Air Divider Hose "Y" - 4" Entry 4" & 4" Outlets
5010302	Air Divider Hose "Y" - 5" Entry 5" & 5" Outlets
WBCL001561	Air Divider Hose "Y" - 5" Entry 4" & 4" Outlets
5010301	Air Divider Hose "Y" - 5" Entry 5" & 4" Outlets
5012542	Transition Box 8"X 4" No Entry
5012543	Transition Box 10"X 4" No Entry
5011942	Transition Box 12"X 4" No Entry
5011985	Transition Box 12"X 5" No Entry
WBCL001506	Transition Box 10"X 5" No Entry
5011986	Transition Box 12"X 6" No Entry
5011987	Transition Box 10"X 6" No Entry
WBCL500141	Transition Box 10"X 8" No Entry
5011759	Hose Ring Round 4"
WBCL002503	Hose Ring Round 5"
WBCL002504	Hose Ring Round 6"
WBCL002509	Hose Ring Round 7"
WBCL002505	Hose Ring Flat Oval 4"
WBCL002506	Hose Ring Flat Oval 5"
WBCL002507	Hose Ring Flat Oval 6"
WBCL002508	Hose Ring Flat Oval 7"
5001524A	Air Divider Adapter "Y" - 4" Entry 4" & 4" Outlets
5001525A	Air Divider Adapter "Y" - 5" Entry 4" & 4" Outlets
5001526A	Air Divider Adapter "Y" - 5" Entry 5" & 4" Outlets
5001527A	Air Divider Adapter "Y" - 5" Entry 5" & 5" Outlets

## Air System Accessories

Transition Box, Round End Entry



Transition Box, Oval Side Entry



Transition Box, Oval Back Entry



Transition Box, Round Back Entry



<i>Part Number</i>	<i>Description</i>
5011989	Transition Box 8"X 4" End Entry 4" Round
5011990	Transition Box 10"X 4" End Entry 4" Round
5011991	Transition Box 12"X 4" End Entry 4" Round
5011992	Transition Box 10"X 5" End Entry 5" Round
5010235A	Transition Box 8"X 4" Side Entry 5" Flat Oval
5011988	Transition Box 8"X 4" Side Entry 4" Flat Oval
5010311	Transition Box 10"X 4" Side Entry 4" Flat Oval
5010312	Transition Box 10"X 4" Side Entry 5" Flat Oval
5012498	Transition Box 12"X 4" Side Entry 5" Flat Oval
5011993	Transition Box 8"X 4" Back Entry 4" Flat Oval
5011994	Transition Box 10"X 4" Back Entry 4" Flat Oval
5010310	Transition Box 10"X 4" Back Entry 5" Flat Oval
5012272	Transition Box 10"X 5" Back Entry 5" Flat Oval
5010428A	Transition Box 12"X 4" Back Entry 5" Flat Oval
5010429A	Transition Box 12"X 5" Back Entry 5" Flat Oval
5010234A	Transition Box 6"X 6" Back Entry 4" Round

 
## Spare Parts: Air Ducting



<i>Part Number</i>	<i>Description</i>
Insulated flexible air duct 250	
WBCL500139	Duct Ac Flexible Insulated 3"X 25'
5010047	Duct Ac Flexible Insulated 4"X 25'
5010046	Duct Ac Flexible Insulated 5"X 25'
5010844	Duct Ac Flexible Insulated 6"X 25'



## Sea Water Kits

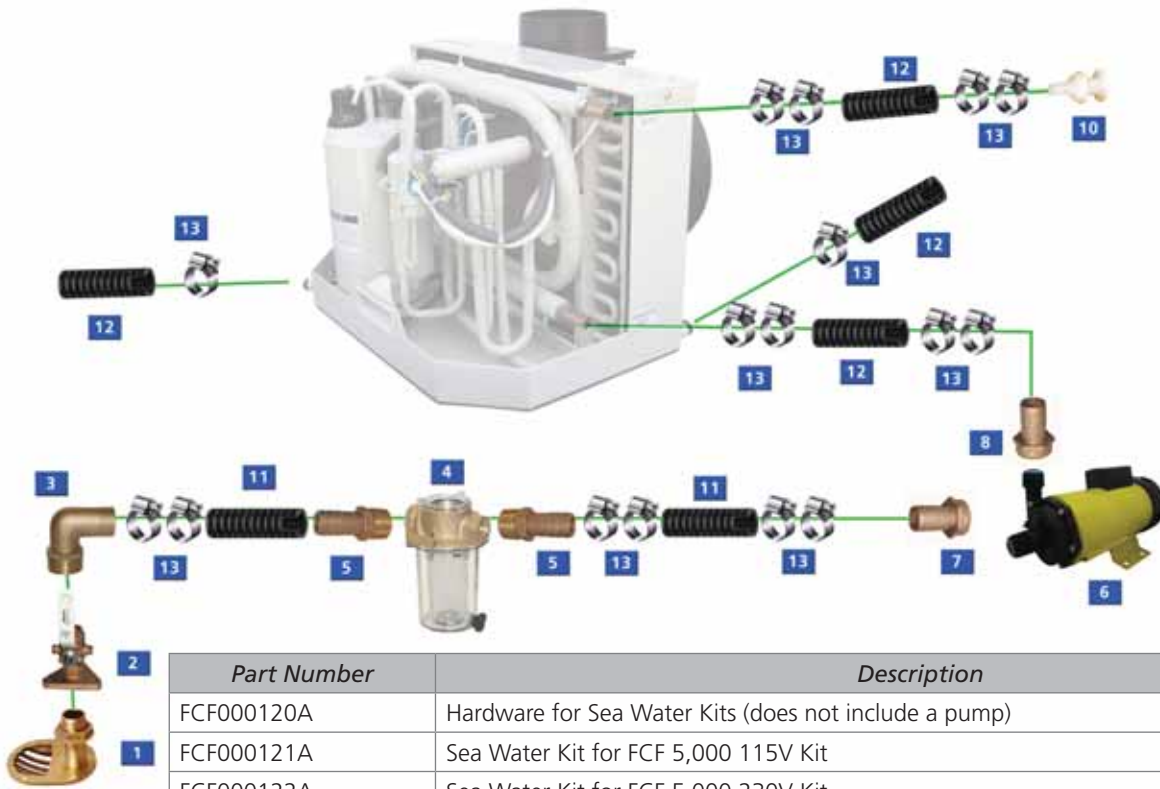

Part Number	Description
FCF000120A	Hardware for Sea Water Kits (does not include a pump)
FCF000121A	Sea Water Kit for FCF 5,000 115V Kit
FCF000122A	Sea Water Kit for FCF 5,000 230V Kit
FCF000123A	Sea Water Kit for FCF 9,000 115V Kit
FCF000124A	Sea Water Kit for FCF 9,000 230V Kit
FCF000125A	Sea Water Kit for FCF 12,000 or 16,000 115V Kit
FCF000126A	Sea Water Kit for FCF 12,000 or 16,000 230V Kit
<b>Kit Contents</b>	
Item/Part Number	Description
<b>1</b> 5010431A	Bronze Sea Water Scoop 3/4" MNPS
<b>2</b> 5010218A	Bronze Seacock 3/4" FNPS to 3/4" FNPT
<b>3</b> 5010219A	Bronze 90 deg. Elbow 3/4" MNPT to 3/4" Hose Barb
<b>4</b> 5010430A	Strainer Sea Water Bronze 3/4" FNPT
<b>5</b> 5010222A	Bronze Fitting 3/4" MNPT to 3/4" Hose Barb
<b>6</b> (see page 18)	Seawater Pump
<b>7</b> 5010432A	Bronze Fitting 3/4" FNPT to 3/4" Hose Barb
<b>8</b> 5010433A	Bronze Fitting 3/4" FNPT to 5/8" Hose Barb
<b>10</b> 5001530A	Thru Hull Plastic Overboard 5/8" Hose Barb
<b>11</b> 5010228A	3/4" I.D. Heavy Duty Sea Water Hose
<b>12</b> 5010227A	5/8" I.D. Heavy Duty Sea Water Hose
<b>13</b> NA	Hose Clamp for Sea Water System

\*either 115V or 230V, depending on kit ordered

## Pumps and Relays



FCF Sea Water Pumps

### Sea Water Pumps - 115/230 Volt

<i>Part Number</i>	<i>Description</i>
5010346A	Pump Sea Water 115V FCF 5,000
5010347A	Pump Sea Water 230V FCF 5,000
5010348A	Pump Sea Water 115V FCF 9,000
5010349A	Pump Sea Water 230V FCF 9,000
5010350A	Pump Sea Water 115V FCF 12,000 and 16,000
5010351A	Pump Sea Water 230V FCF 12,000 and 16,000



<i>Part Number</i>	<i>Description</i>
	Relay Box for AC Units with One Pump
WBCL001127B	Relay Box 230V- 2 A/C units 1 Seawater Pump
WBCL001128B	Relay Box 230V- 3 A/C units 1 Seawater Pump
WBCL001129B	Relay Box 230V- 4 A/C units 1 Seawater Pump
WBCL001182B	Relay Box 115V -2 A/C units 1 Seawater Pump
WBCL001183B	Relay Box 115V- 3 A/C units 1 Seawater Pump
WBCL001184B	Relay Box 115V- 4 A/C units 1 Seawater Pump

## Sea Water System Components



### Closing Valves - Turn Ball Valve

<i>Part Number</i>	<i>Description</i>
5001518A	Valve Ball, Manual, Bronze, 1/2" FNPT
5001519A	Valve Ball, Manual, Bronze, 3/4" FNPT
5001520A	Valve Ball, Manual, Bronze, 1" FNPT

## Spare Parts

### Handle for Base (R22 and R410 models)

<i>Part Number</i>	<i>Description</i>
FCFSP0015A	Handle For Base 5,000 Btu 115V & 230V Units
FCFSP0021A	Handle for base 9,000/12,000 & 16,000 Btu 115V & 230V Units

### Rubber Stopper for Base Pan (R22 and R410 models)

<i>Part Number</i>	<i>Description</i>
FCFSP0061A	Rubber Stopper Base Pan - All Units

### Compressor Capacitor (R410 models only)

<i>Part Number</i>	<i>Description</i>
FCFSP0072A	Capacitor Compressor 40uF/450V 5,000 115V Unit
FCFSP0018A	Capacitor Compressor 50uF/450V 9,000 115V Unit
FCFSP0069A	Capacitor Compressor 25uF/450V 5,000& 9k 230V Units
FCFSP0005A	Capacitor Compressor 35uF/450V 12,000 230V Unit
FCFSP0075A	Capacitor Compressor 60uF/450V 16,000 115V Unit
FCFSP0077A	Capacitor Compressor 30uF/450V 16,000 230V Unit

### Compressor Capacitor (R22 models only)

<i>Part Number</i>	<i>Description</i>
FCFSP0005A	Capacitor Compressor 35uF/450V 5,000 115V Unit
FCFSP0018A	Capacitor Compressor 50uF/450V 9,000 & 12,000 115V Units
FCFSP0019A	Capacitor Compressor
FCFSP0062A	Capacitor Compressor 15uF/450V 5,000 & 9,000 230V Units
FCFSP0069A	Capacitor Compressor 25uF/450V 12,000 230V Unit
FCFSP0077A	Capacitor Compressor 30uF/450V 16,000 230V Unit

### Fan Capacitor (R22 and R410 models)

<i>Part Number</i>	<i>Description</i>
FCFSP0063A	Capacitor Fan 3.5uF/450V 5,000 & 12,000 230V Units
FCFSP0067A	Capacitor Fan 4uF/450V 9,000 & 16,000 230V Units
FCFSP0006A	Capacitor Fan 15uF/300V All 115V Units

## Spare Parts

<b>Condenser Clip (R22 and R410 models)</b>	
<i>Part Number</i>	<i>Description</i>
FCFSP0026A	Condenser Clip Right Side 16,000 Units
FCFSP0030A	Condenser Clip Left Side 16,000 Units
FCFSP0054A	Condenser Clip Right Side 5,000/9,000 & 12,000 Units
FCFSP0055A	Condenser Clip Left Side 5,000/9,000 & 12,000 Units

<b>Blower Assembly (R22 and R410 models)</b>	
<i>Part Number</i>	<i>Description</i>
FCFSP0012A	Blower Assembly 5,000 Btu 115V Unit
FCFSP0022A	Blower Assembly 9,000 Btu 115V Unit
FCFSP0024A	Blower Assembly 12,000 Btu 115V Unit
FCFSP0028A	Blower Assembly 16,000 Btu 115V Unit
FCFSP0074A	Blower Assembly 5,000 Btu 230V Unit
FCFSP0086A	Blower Assembly 9,000 Btu 230V Unit
FCFSP0094A	Blower Assembly 12,000 Btu 230V Unit
FCFSP0105A	Blower Assembly 16,000 Btu 230V Unit

<b>Solenoid Reversing Valve (R22 and R410 models)</b>	
<i>Part Number</i>	<i>Description</i>
FCFSP0001A	Solenoid Reversing Valve All 115V Units
FCFSP0060A	Solenoid Reversing Valve All 230V Units

<b>Sensors (R22 and R410 models)</b>	
<i>Part Number</i>	<i>Description</i>
FCFSP0002A	Sensor Return Air Temp All Units
FCFSP0003A	Sensor Evaporator Temp All Units

## Spare Parts

### Air Filters (R22 and R410 models)

<i>Part Number</i>	<i>Description</i>
FCFSP0016A	Air Filter 5,000 Btu 115V & 230V Units
FCFSP0023A	Air Filter 9,000 Btu 115V & 230V Units
FCFSP0027A	Air Filter 12,000 Btu 115V & 230V Units
FCFSP0031A	Air Filter 16,000 Btu 115V & 230V Units

### Duct Ring (R22 and R410 models)

<i>Part Number</i>	<i>Description</i>
FCFSP0011A	Duct Ring 4" 5,000 & 9,000 Btu Units
FCFSP0017A	Duct Ring 5" 12,000 & 16,000 Btu Units

### Clamp (R22 and R410 models)

<i>Part Number</i>	<i>Description</i>
FCFSP0058A	Clamp Hold Down All Units

### Electrical & Electronics (R22 and R410 models)

<i>Part Number</i>	<i>Description</i>
FCFSP0007A	Transformer SC23v3 All 115V Units
FCFSP0064A	Circuit Board All 115V Units
FCFSP0010A	Digital Display w/Cable All Units
FCFSP0013A	Remote Control All Units
FCFSP0059A	Terminal Board All Units
FCFSP0065A	Transformer SC23v3 All 230V Units
FCFSP0071A	Circuit Board All 230V Units

## Notes

A series of horizontal dotted lines for writing notes.

## Notes

A series of horizontal dotted lines for writing notes.

■ Webasto locations



Whether OEM or aftermarket: our products improve comfort onboard. The name Webasto stands for innovative, economic and environmentally sound heating, cooling and ventilation systems for boats, cars, truck, buses and off-highway vehicles. Our success is based on our wide range of products and high quality standard. An outstanding network of dealers guarantees top quality installation and service around the globe.

Webasto Thermo & Comfort  
North America, Inc.

15083 North Road  
Fenton, Michigan 48430  
USA

Toll Free: 800-860-7866  
Phone: 810-593-6000

[www.webasto-marine.com](http://www.webasto-marine.com)