

# Air Top 2000 ST/C Air Heater



WARNING: Cancer and  
Reproductive Harm  
[WWW.P65Warnings.ca.gov](http://WWW.P65Warnings.ca.gov)



## OPERATING INSTRUCTIONS

### SWITCH ON

- Rotate heater control knob clockwise ↻ until indicator light illuminates.
- Heater delivers warm air after running 1 to 2 minutes.
- Heater will only start when set temperature is above sleeper temperature.



*Heater Control Dial*

### SET TEMPERATURE


- Rotate heater control knob for temperature adjustments.

↻ = more heat    ↻ = less heat

### SWITCH OFF

- Rotate heater control counterclockwise ↻ until it clicks and the indicator light turns off.
- Heater runs 2 minutes in cool down mode.

**NOTE:** Always make sure that air inlet/outlet grilles are not restricted. See Operating manual for complete details.

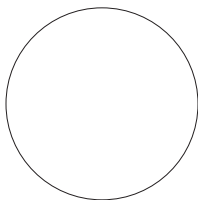

## TROUBLESHOOTING

If heater fails to start after 2 start attempts, check the following:

### ■ POWER

- Operational fuse.
- Adequate voltage (11V to 13V).
- Battery connections.

### ■ FUEL

- Fuel supply (level).
- Fuel line restrictions.
- Fuel gelling.

### ■ FLASHING INDICATOR LIGHT/OVERHEAT

- Air inlet/outlet grille restrictions.

## RESET HEATER

- SWITCH IT OFF AND BACK ON AGAIN

## MAINTENANCE

To ensure trouble-free operation of your Webasto heater, please observe the following:

- Operate heater for at least 20 minutes once a month.  
This keeps parts from seizing and lubricates the fuel pump.
- Keep fresh air inlet and outlet free of obstructions to prevent overheating.
- Keep combustion air inlet and exhaust outlet tube free of dirt and obstructions.
- Change fuel filter annually (or more often, if needed).

**Webasto Service Hotline: 1-800-860-7866**



**Feel the Drive**