



# Category: Accessory Products (Jeep)

Document Number: PI142TP

Date: 9/12/2017

Rev 08/2018

Description: **JK ThrowBack A-Pillar / B-Pillar / Rear Edge Water Leak Repair**




**WARNING:** Cancer and Reproductive Harm  
[www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

If you experience a water leak during heavy rain conditions please follow the proceeding steps to ensure a tight watertight fit.

Parts required for the repair:

Corner Foam Pieces			
Passenger Front	Driver Front	Passenger Rear	Driver Rear

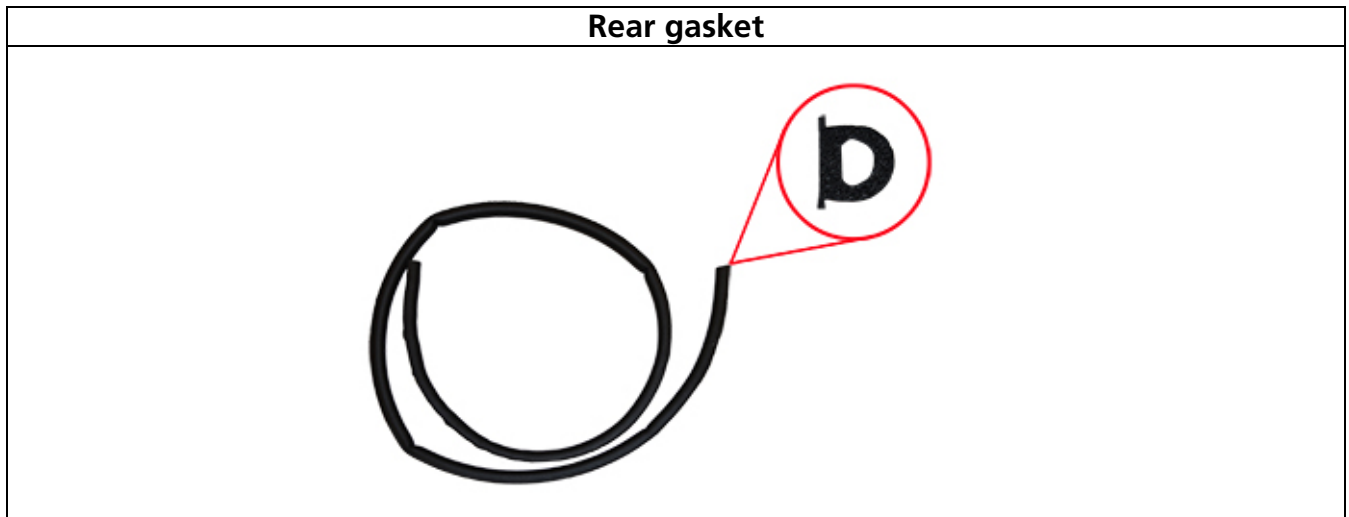

Scan the QR code for a video demonstration of the information in this document.






## A-Pillar Water leak



Remove ThrowBack top and turn upside down on bench before proceeding. Remove factory foam as shown in adjacent picture from both front corners.

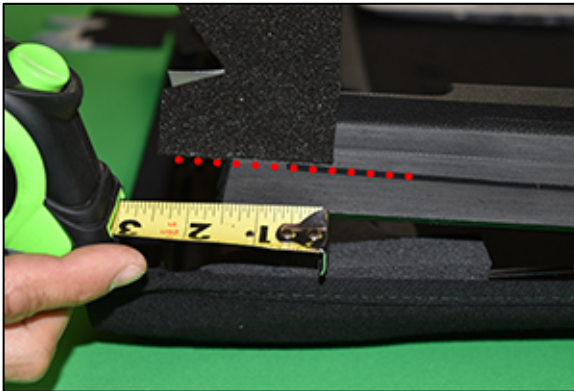


After cleaning the area with wax and grease remover, align the outside edge of the front foam piece with the inside of the groove on the frame. The rear edge of the foam is aligned approximately 1.5 in. from the front edge of the frame.



Following the contour of the ThrowBack frame, adhere the foam to the frame but do not wrap the foam around the frame at this time.



## A-Pillar Water leak (Continued)

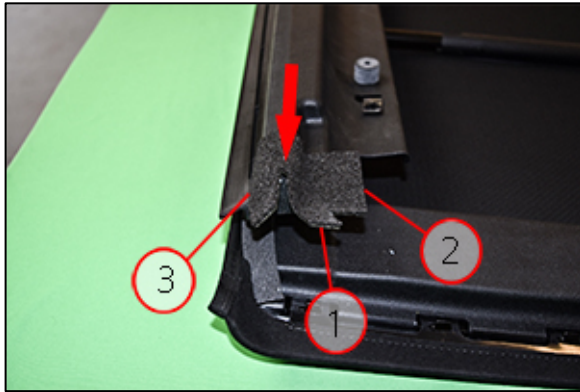

Fold the 3 tabs in the sequence indicated. The seam (arrow) must be closed.




The foam section should cover the end cap of the front rail and wrap around to the upper side of the rail.



Foam installed and ThrowBack re-installed on vehicle.



**B-Pillar Water Leak**

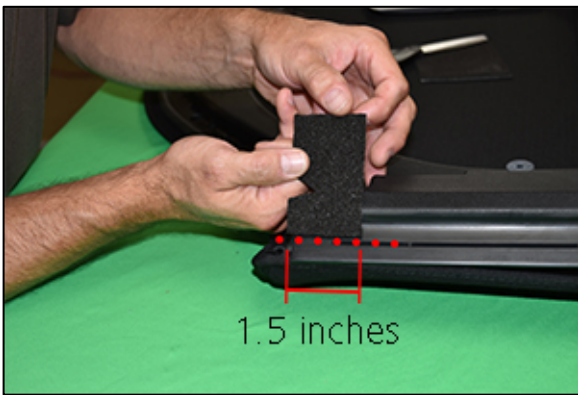

Remove ThrowBack top and turn upside down on bench before proceeding. Align the outside edge of the foam on the inside edge of the groove in the frame as shown.



Wrap the foam around the frame and. Be sure seams are closed to prevent water leaks.



Foam installed and ThrowBack re-installed on vehicle.



## Rear Edge Water Leak



Prep the plastic edge of the fabric with wax and grease remover.

Start and terminate the new seal approximately 3/4" from the edge of the roof. This is to prevent it from showing from the outside of the vehicle. Press the gasket to the plastic strip firmly as you go.

Any questions, contact our technical support team at (800) 860-7866 or via email at: [info-us@webasto.com](mailto:info-us@webasto.com).