

Category: Accessory Products



Document Number: 5012614B

Date: 06/23/2017 Rev 08/2018

Description: **Jeep JK Front Corner Separation / Repair**




WARNING: Cancer and Reproductive Harm
www.P65Warnings.ca.gov

Summary

In certain conditions with the ThrowBack Top in the open position it is possible for the left and / or right canvas corners to release from the frame as shown below. This is strictly a cosmetic issue and there is no possibility of further canvas separation.

This modification will ensure that the canvas tension cables that run through each side of the ThrowBack Top maintain proper tension while in the full open position. Follow the instructions below for proper installation.

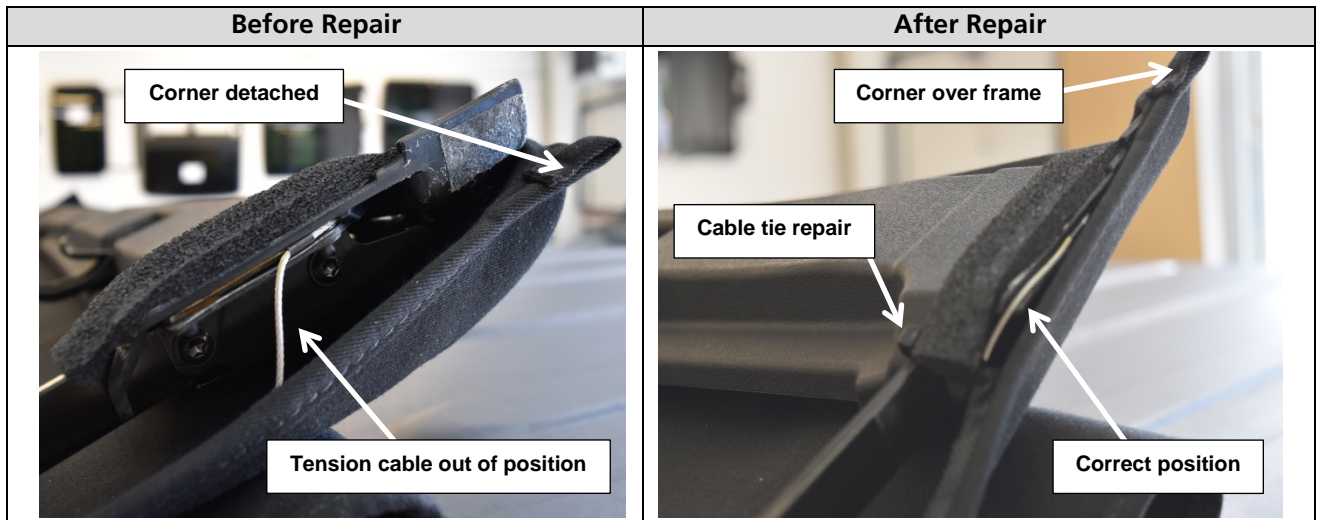









Kit Contents:


Description	Quantity
Cable tie	2
Two sided tape (Cut to fit)	1
Protective tape (Cut to fit)	1

Product Information

Installation:

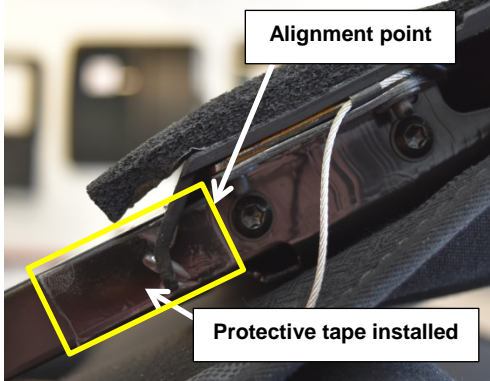Step	Image	Description
1.		Open top to the full open position.
2.		If either corner has separated from the frame, re-install them at this time. There is no need to replace the two sided tape on frame corners as warm ambient temperature will re-adhere this tape.
3.		For this installation the driver's side mechanism will be used as reference. Locate the foam strip installed along the side rail. From the rear most end of the foam, carefully peel back 1 inch to access this location for the following steps.
4.		Remove backing from the supplied protective tape. Begin aligning the protective tape around underside of mechanism rail. Install protective tape as shown

		<p>beginning by aligning to the edge of the header beam as shown. This will prevent any possibility of a rubbing effect from the soon to be installed cable tie.</p>
5.		<p>Install one cable tie around the tension cable and the mechanism arm as shown in the adjacent picture. Ensure the head of the cable tie is located on the inward side of the mechanism assembly. Cut off excess cable tie once secured in place.</p>
6.		<p>Cut the provided two sided tape in half using one section for each side of the top. Install this two sided tape to the foam piece location previously peeled back for cable tie access.</p>
7.		<p>Remove the second protective backing and re-secure foam into its original location.</p> <p>Ensure this rear most end of foam has been</p>

		properly re-secured.
8.	Perform steps 1-7 on opposite mechanism. Installation complete.	

If you have any questions, contact our technical support team at (800) 860-7866 or via email at: info-us@webasto.com.